

Model No.

- 8097 -

p/n 108322

Specifications

- Height: 60" (22" packed)
- Width: 45"
- Depth: 80" (36" packed)
- Weight: 53 lbs.
- Instruction p/n 102476



- Clam Customer Service Information -

NOTICE!! Once used, this shelter cannot be returned to the store. If you have a warranty claim, have your sales receipt ready and contact Clam Corporation Customer Service by email inquiry or direct by calling:

- Customer Service Hrs: - 9am to 4pm, Mon. - Fri. Central Standard Time
- Clam Corporation
600 Clydesdale Trail
Medina, MN 55340
- Phone - 763-231-4120
- Fax - 763-231-4121
- Website – www.clamcorp.com
- Email – customerservice@clamcorp.com




Clam Corporation cannot honor warranty without an original, dated receipt.

- Parts List -

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	101070	TUBE, PRO CANOPY HOOP	3
2	101079	TUBE, PRO PORCH HOOP	1
3	101096	MOLDING, PRO U-CHNL	1
4	101463	ASSY, GREY PADDED SEAT	1
5	101466	HAMMOCK, ACCESSORY	1
6	102495	BASE, PRO 08-09	1
7	102502	TUBE, PRO SEAT RAIL SUPPORT	1
8	102433	TENT, 08/09 PRO	1
9	101042	BRKT, RH CANOPY	1
10	101043	BRKT, LH CANOPY	1
11	101069	POLE CANOPY	6
12	101078	TUBE, PORCH	2
13	101146	CHANNEL, 8.78 ALUM EXT	2
14	101420	BRKT, FRONT RETAINER	1
15	102430	BRKT, REAR RETAINER	1
16	101652	TUBE, 20.00 SEAT RAIL	2
17	101048	BLOCK, SLIDE	4
18	101080	SCREW, 1/4-20 X 1.25	8
19	101081	WASHER, 1/4 FLAT	10
20	101082	NUT, 1/4-20 THIN NYLOCK	26
21	101083	CAP, TUBE SPACER	8
22	101088	SCREW, 1/4-20 X 0.75	8
23	101147	SCREW, #10 x 1.00	4
24	101148	SCREW, #6 X 0.38	16
25	101429	PLUG, 1.16 DIA TUBE	4
26	101430	CAP, TUBE 1 X 2 - 1/8	2
27	102512	SPRING, CATCH	1
28	101486	SCREW, 1/4-20 X 1.75	4
29	101487	SCREW, 1/4-20 X 2.75	2
30	101613	SPACER, PLASTIC	4
31	101614	SCREW, 1/4-20 X 2.50	4
32	101470	SCREW, 1/4-20 X 0.50	4
33	102476	MANUAL, 08/09 PRO	1
34	101095	ROPE, 3/8 DIA X 9 FT	1
35	101399	SEAT SWIVEL ASSEMBLY	1

- Parts Diagram -

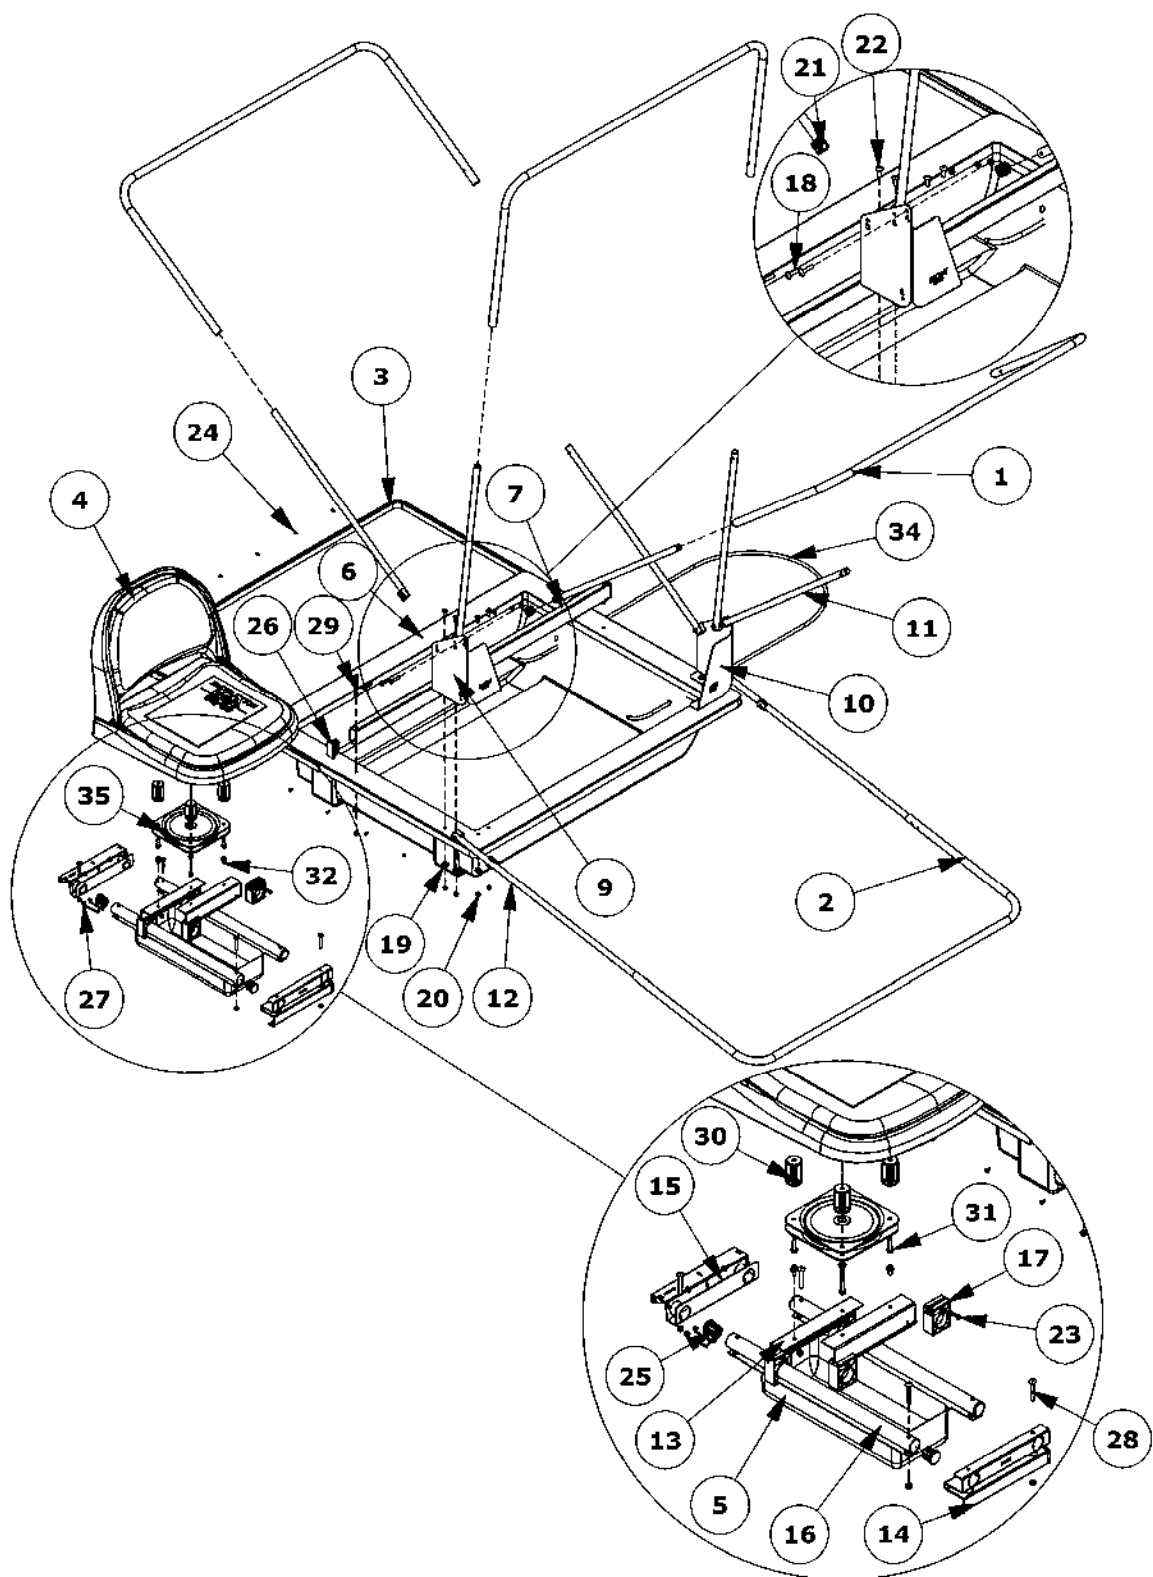


- Step One -

#10 X 1" Long Philips Screw
(p/n 101147)

1/4" Thin Locknut
(p/n 101082)


1-1/2" X 1-3/4" Aluminum Angle X 9" Long
(p/n 101146)

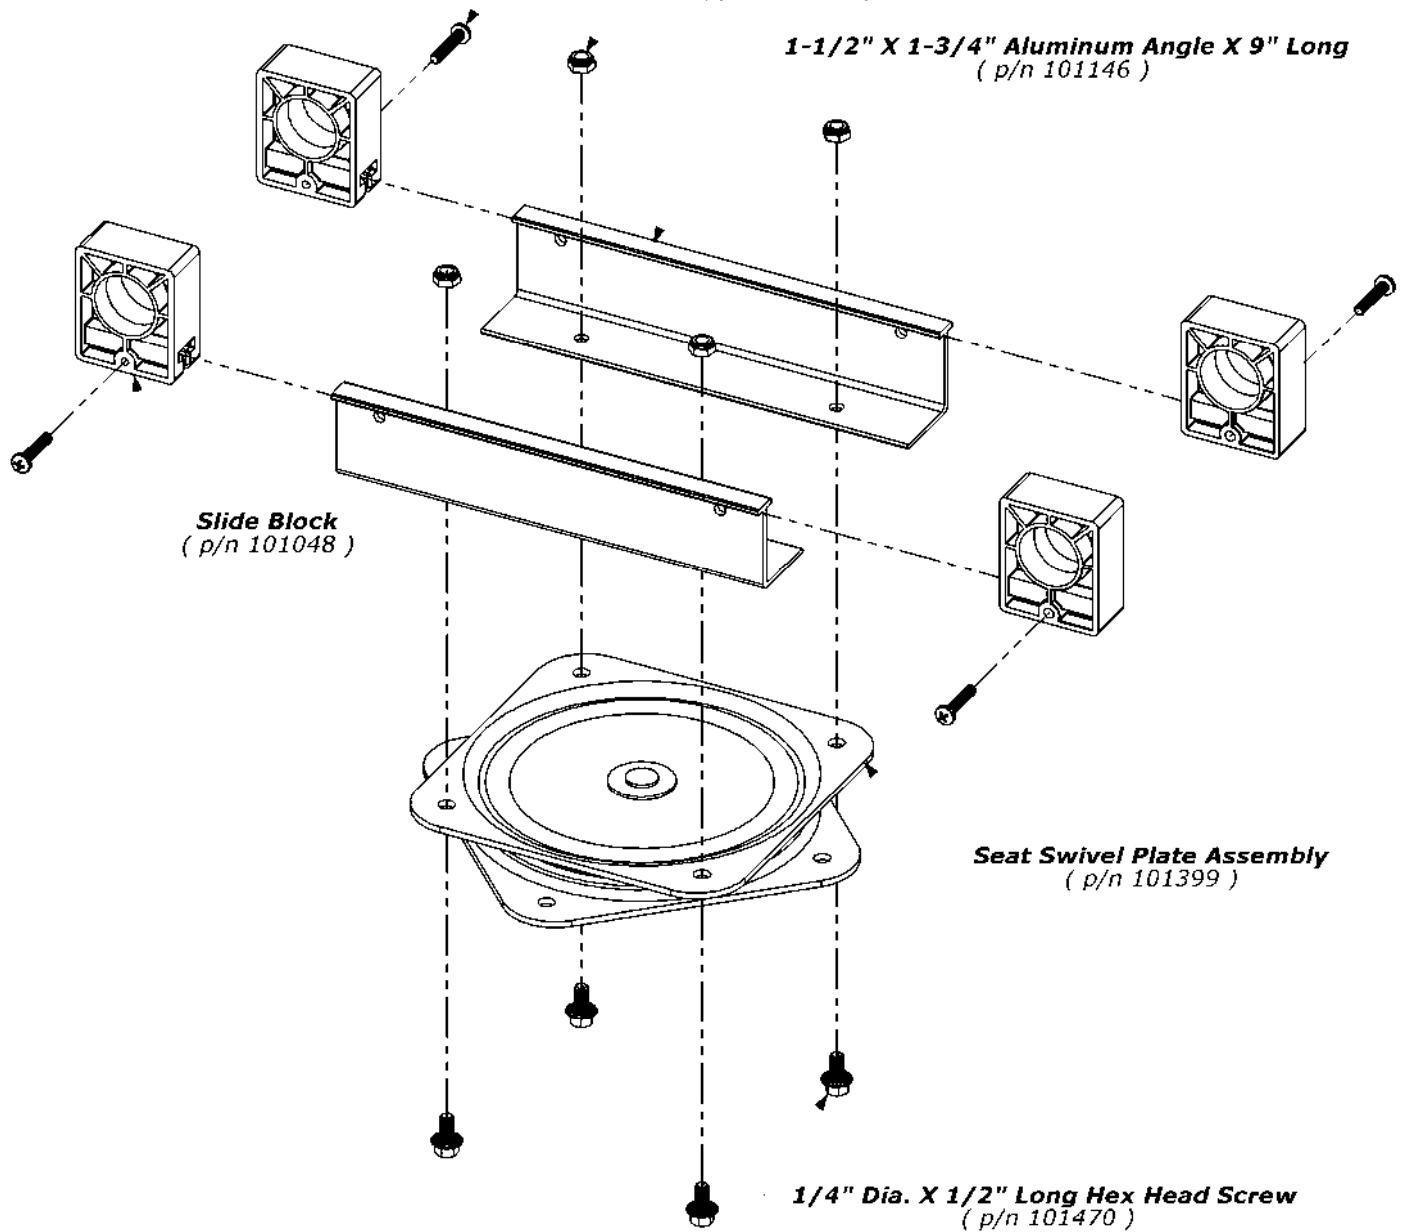


- Step Two -

1/4" Dia. X 2-1/2" Long Hex Head Screw
(P/N 101614)


Assembly from Step One

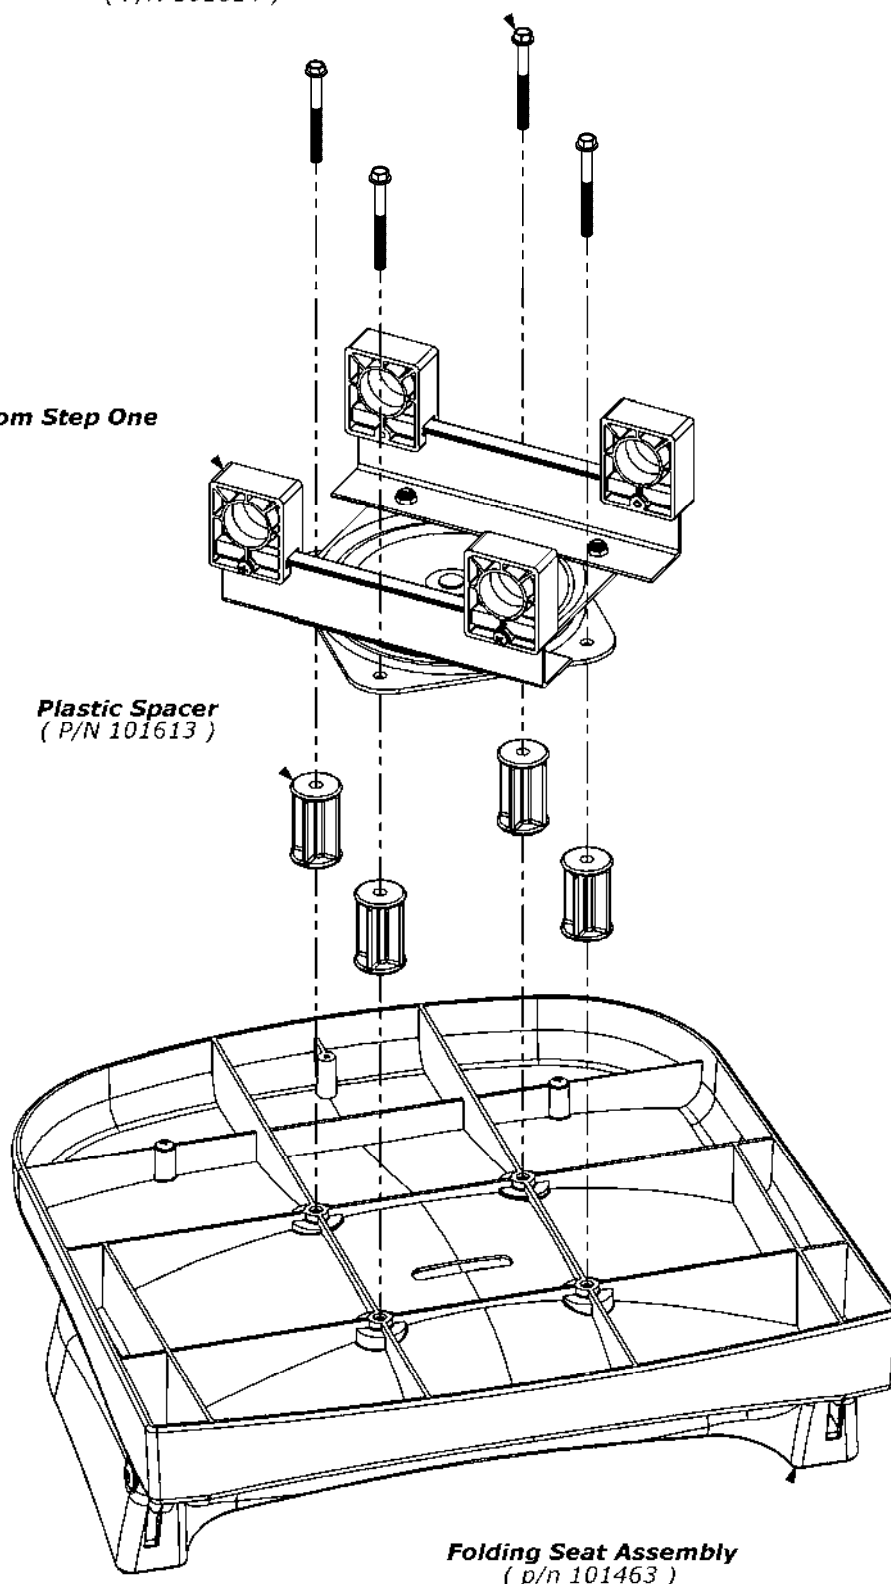


- Step Three -

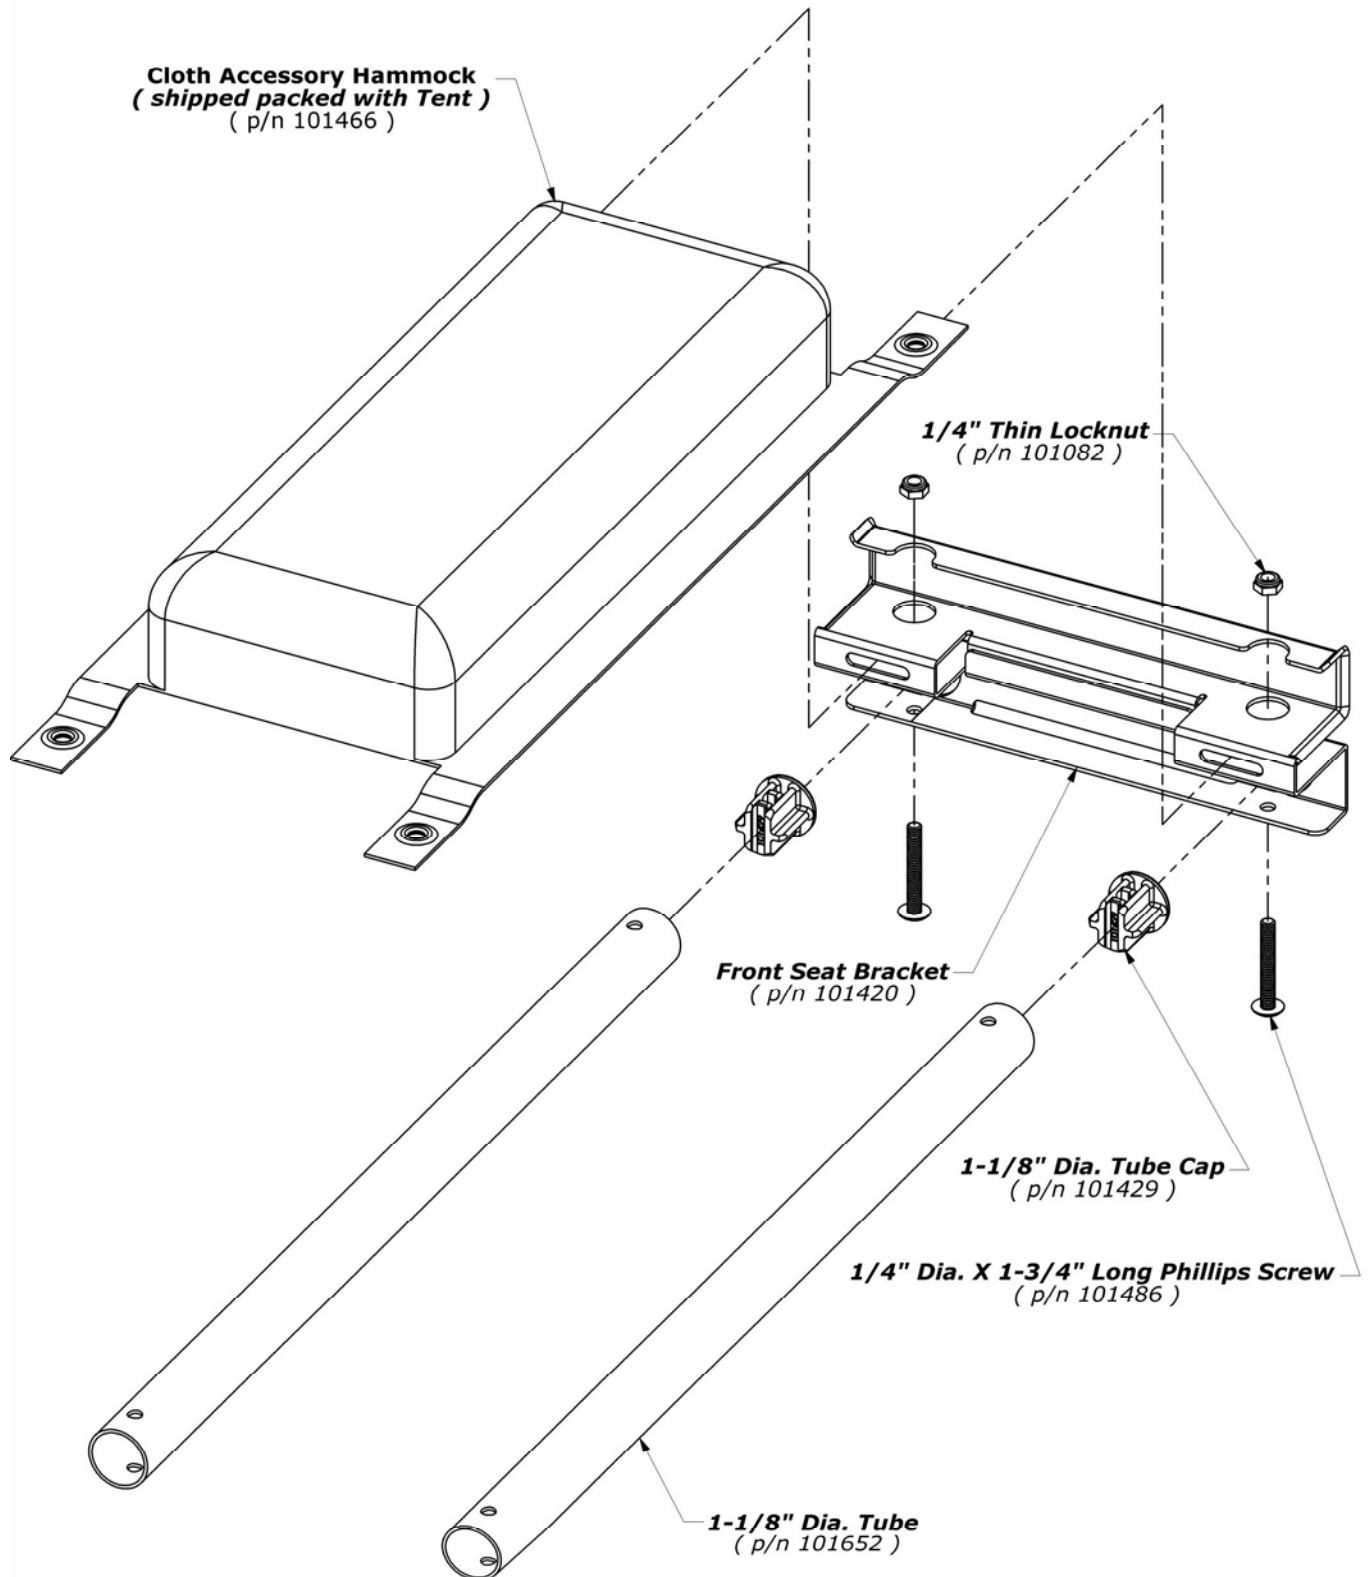


- Step Four -

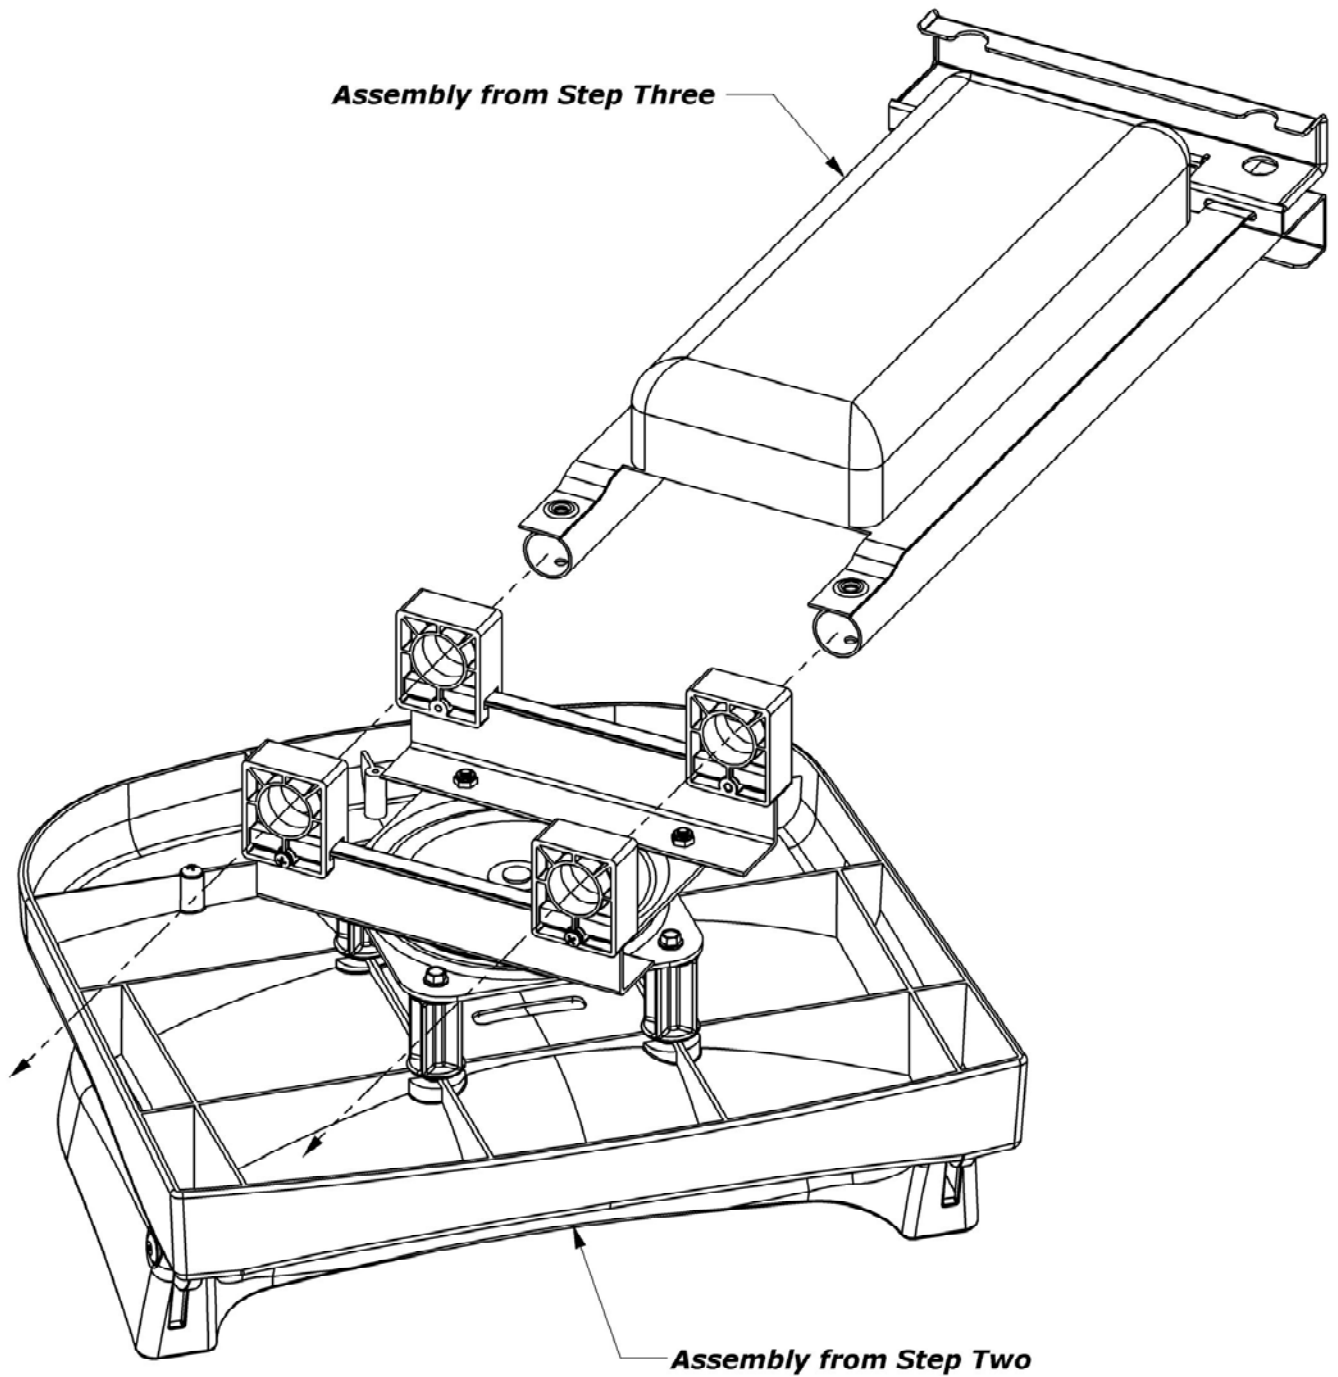

- Step Five -

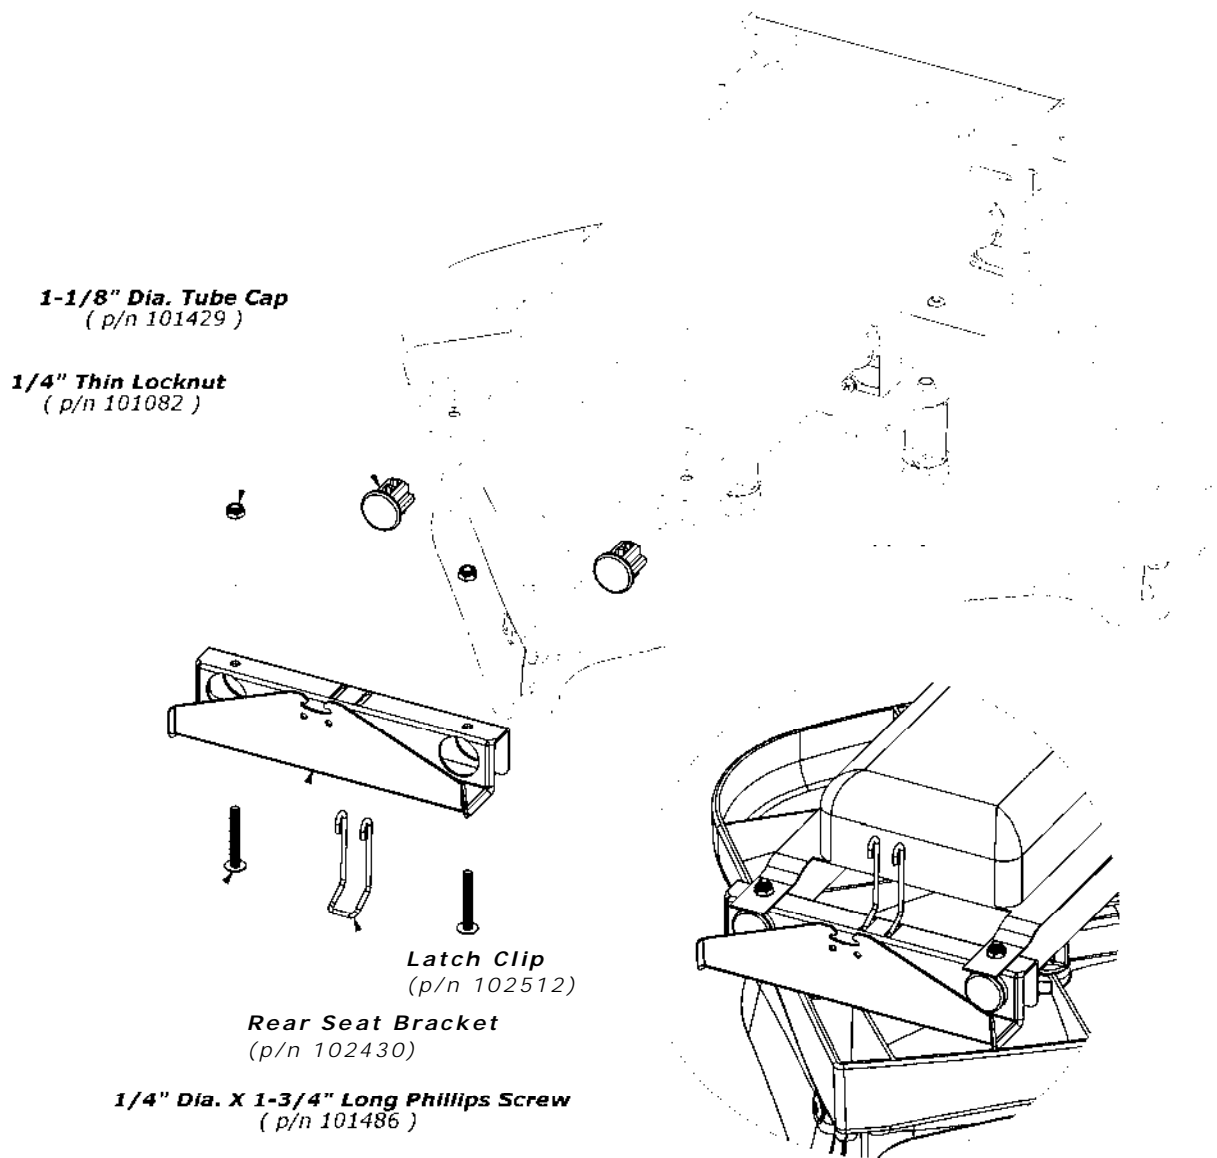

- Step Six -


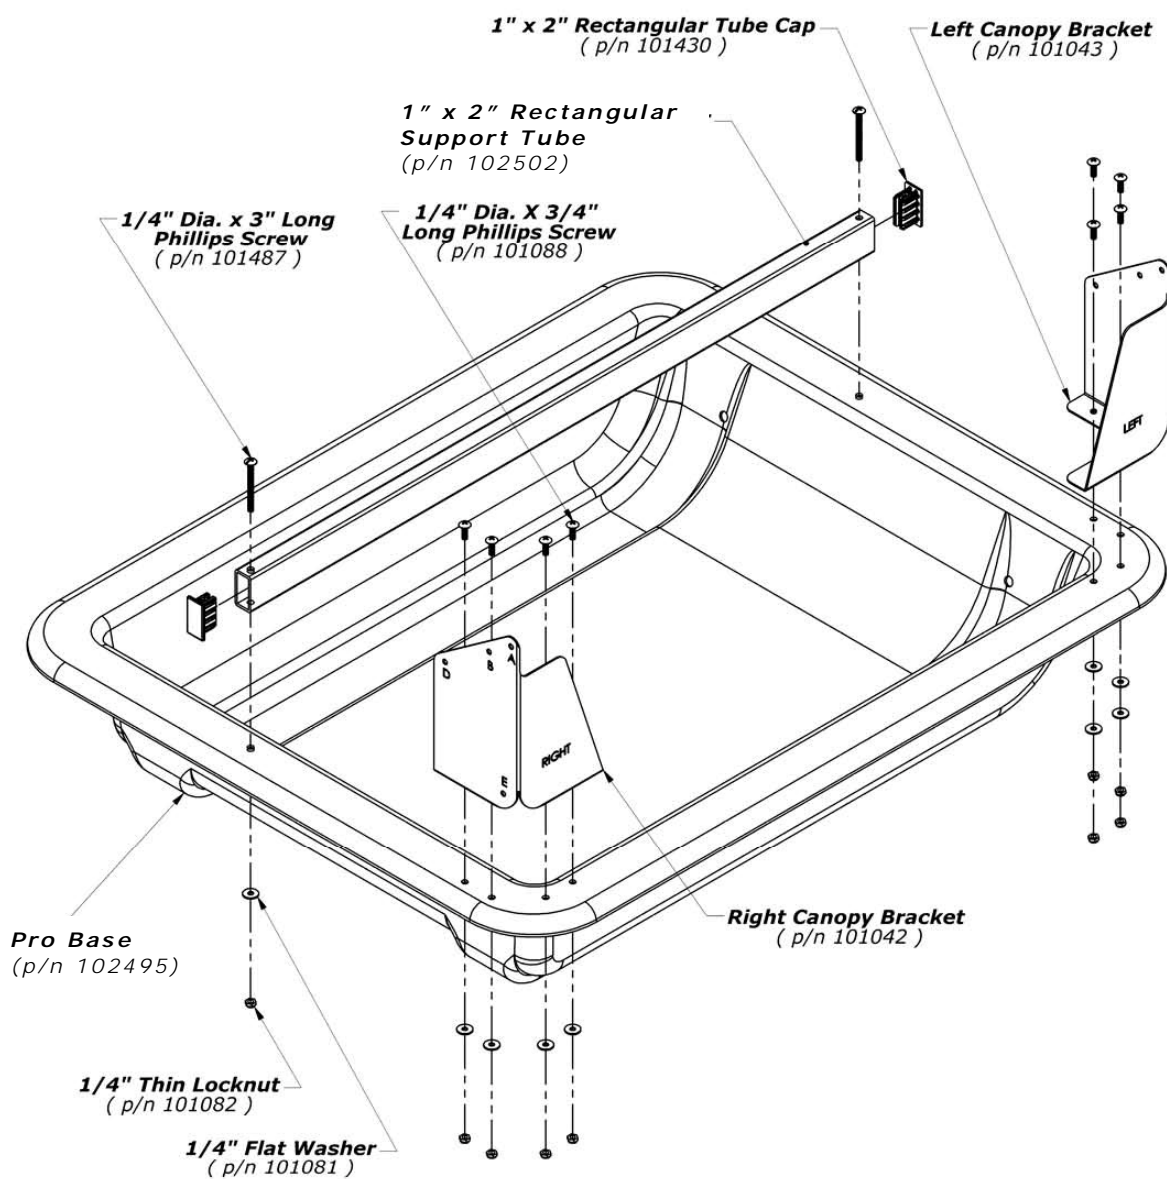


- Step Seven -

- Notice -

Canopy and Porch Pole Spring Buttons on each side face inward

Canopy Pole
(p/n 101069)

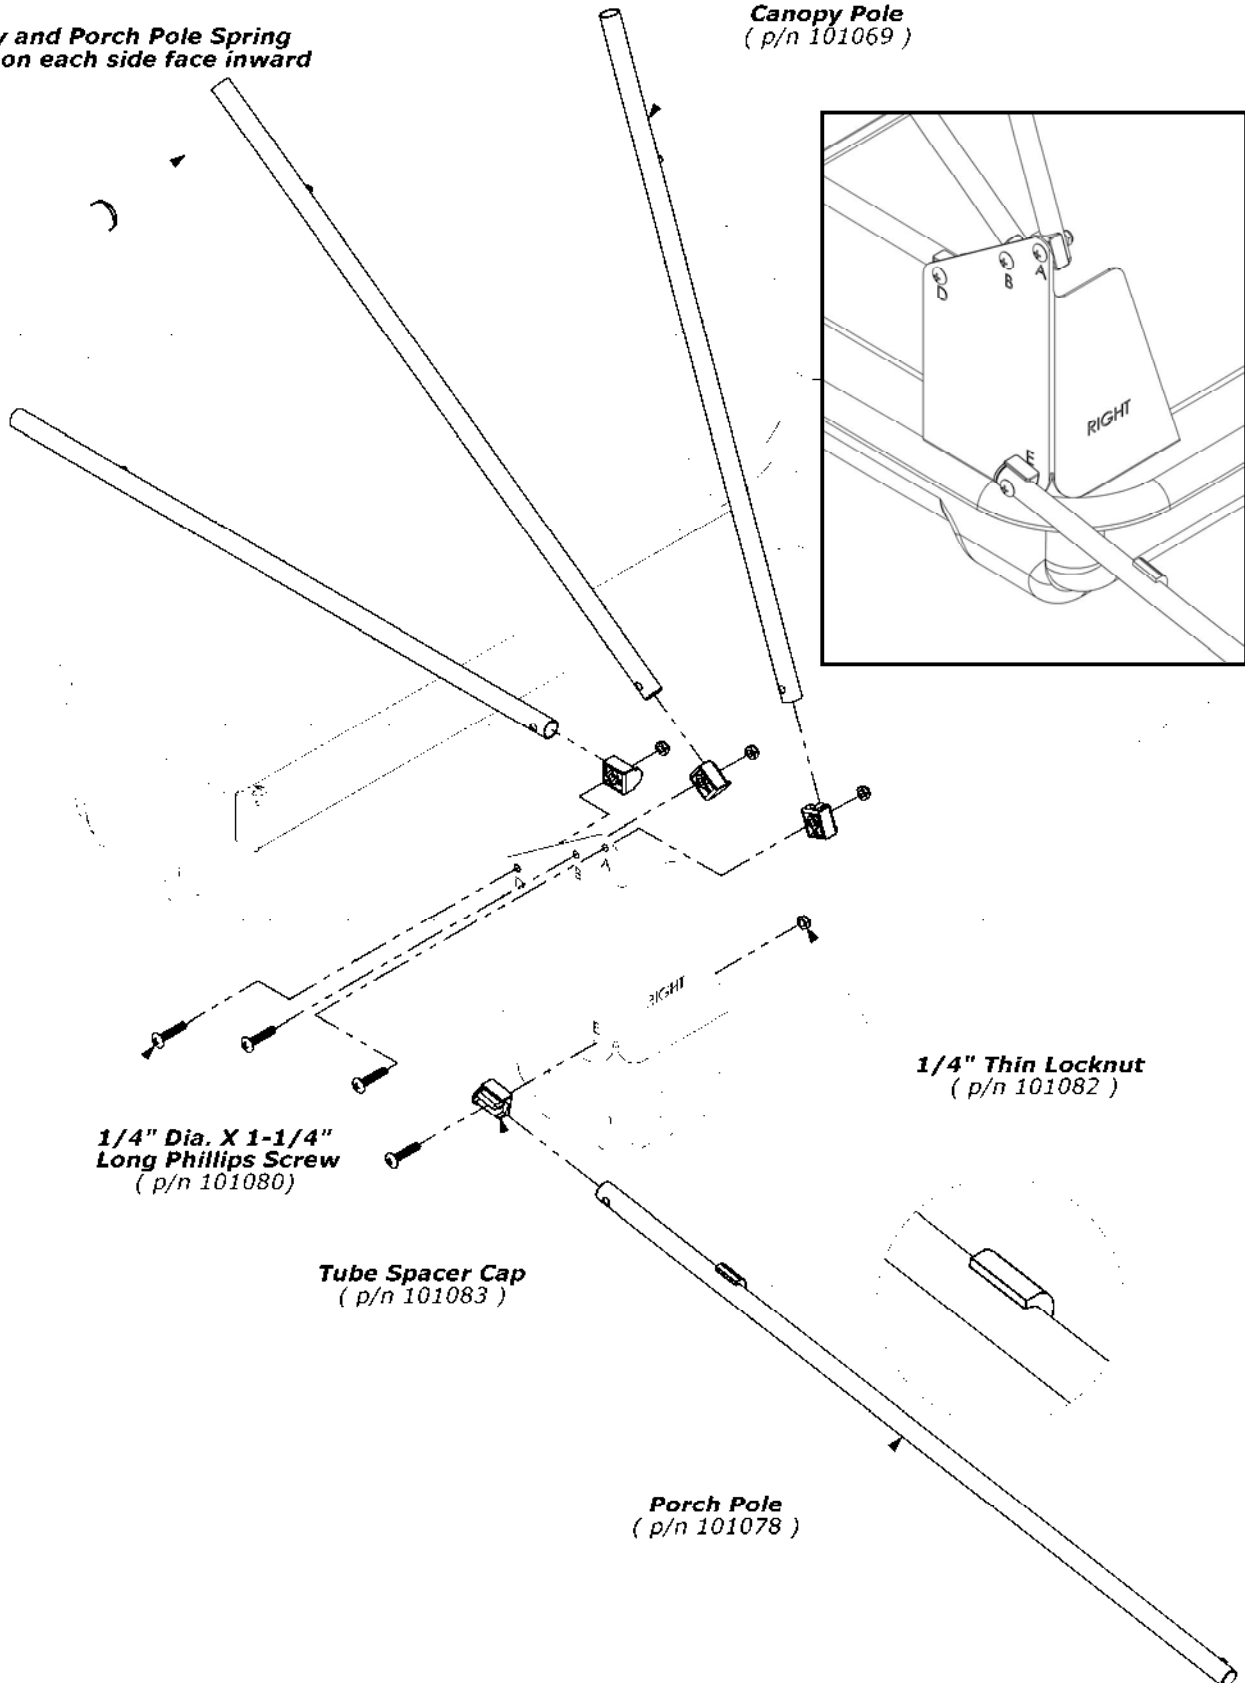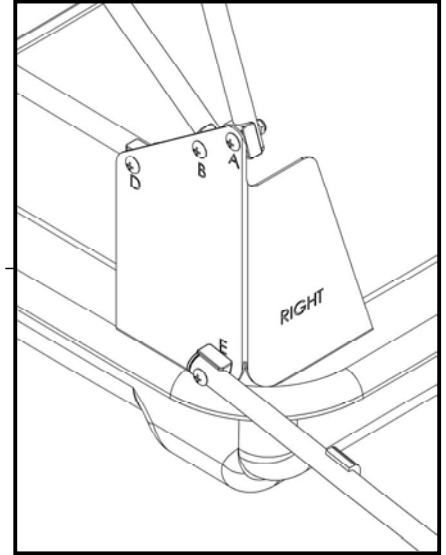

1/4" Dia. X 1-1/4" Long Phillips Screw
(p/n 101080)


1/4" Thin Locknut
(p/n 101082)

Tube Spacer Cap
(p/n 101083)

Porch Pole
(p/n 101078)


- Step Eight -

Slide the canopy hoop poles onto the canopy poles until the spring buttons engage the holes near the ends of each canopy hoop pole.

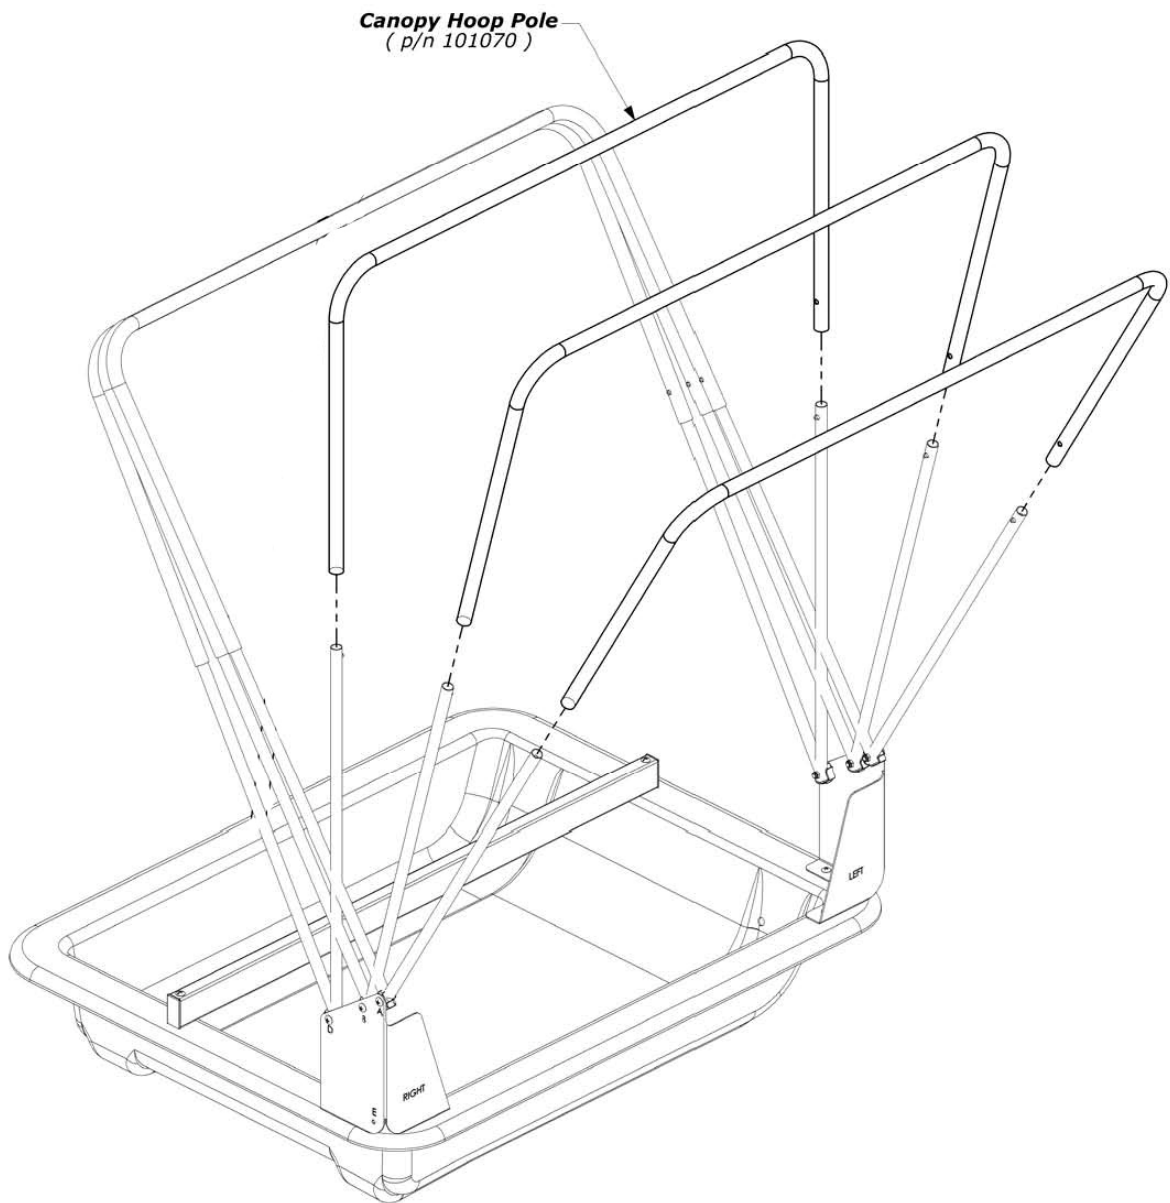

- Step Nine -


Drape the tent over the supported hoops then go inside and spread out the canopy hoop poles, attaching the roof velcro as you go.

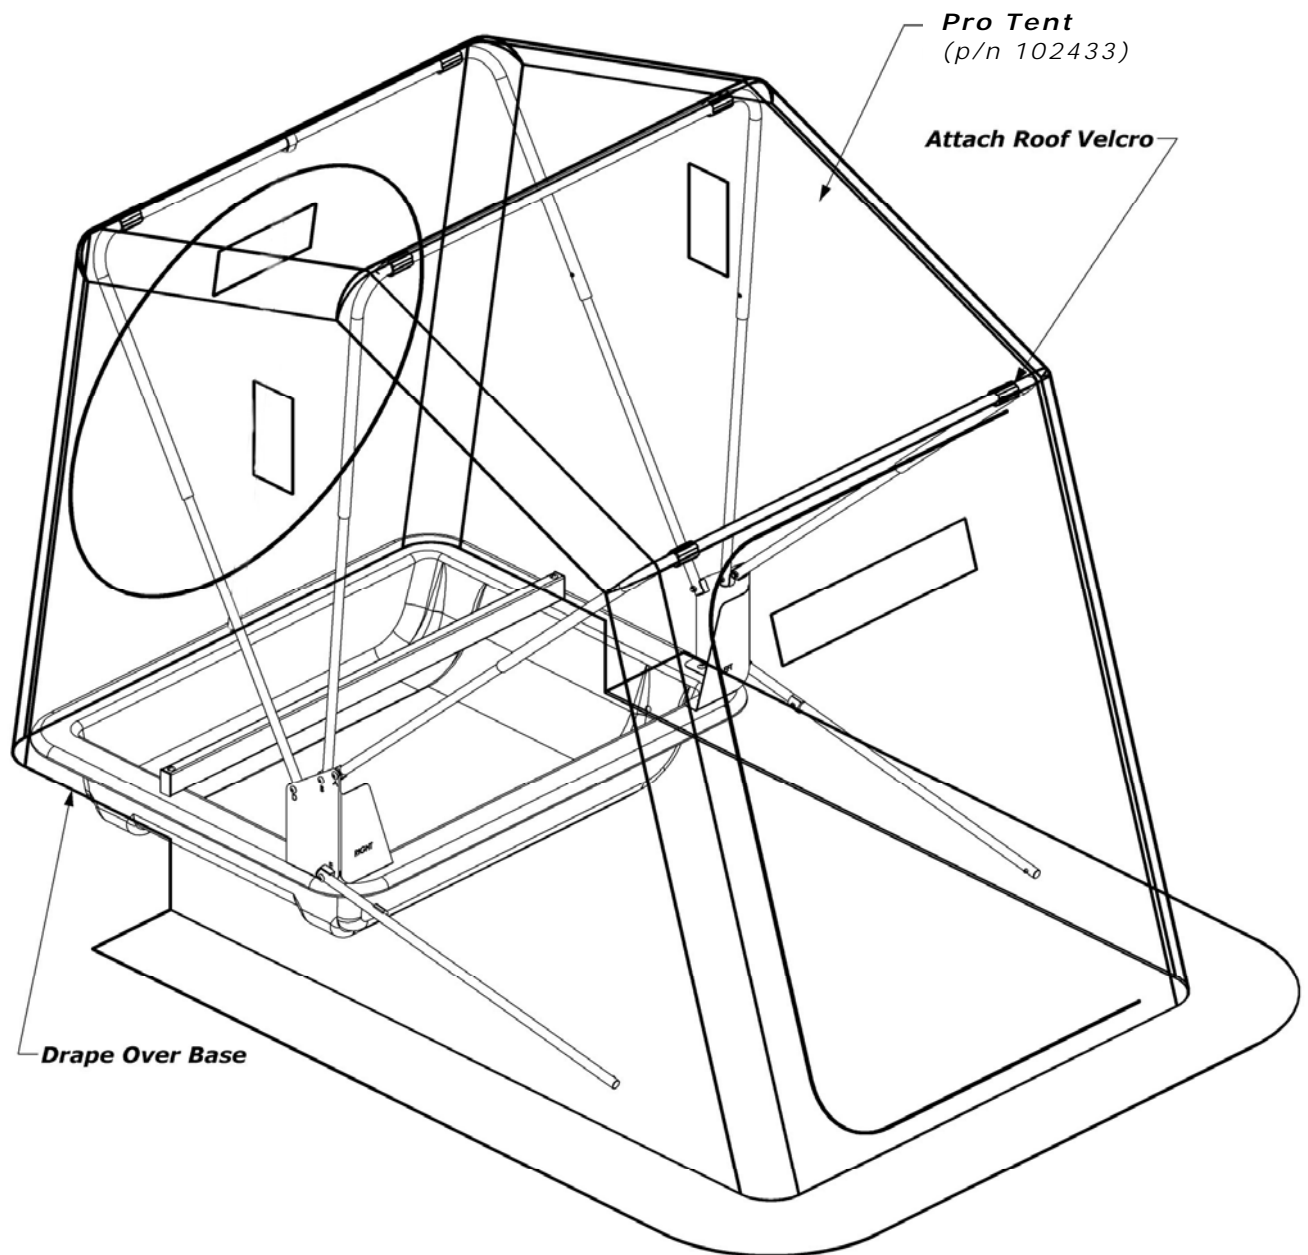

- Step Ten -

Feed the length of the porch hoop pole through the porch hoop sleeve sewn on the Tent. Slide the porch hoop pole onto the porch poles, engaging the second hole position.

Attach the porch velcro on each side of the tent.

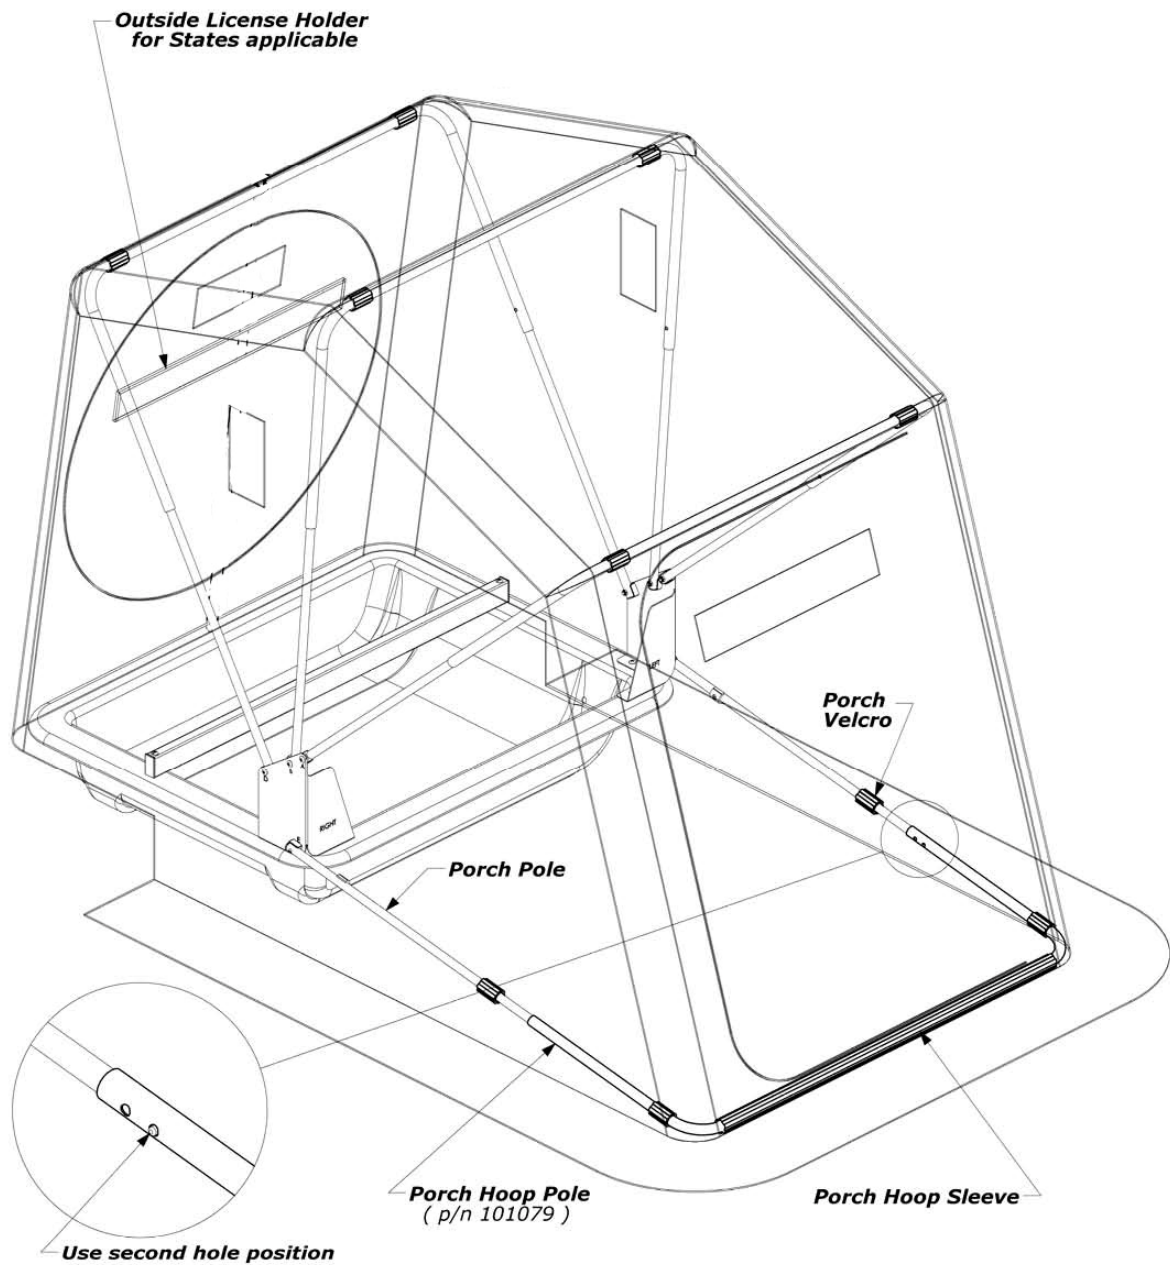

- Step Eleven -


To "set" the tent, grasp the tent material at the rear of the shelter and pull it downward. Observe the porch area of the tent lifting accordingly as you pull. When the U-Channel molding is correctly installed, the porch hoop pole will lightly touch the floor.

To achieve this condition, start by finding the center of the molding. From behind the unit, pull the midpoint of the tent downward and fold the tent material under the base lip. Press the midpoint of the molding over the tent material and base lip. Continue pressing outward in both directions until you have secured about twelve inches of molding onto the base.

Having temporarily secured the tent to the base, take a walk around the unit. Readjust the molding until you have verified the proper porch hoop pole position and also that the tent sides and corners are properly proportioned.

When satisfied, continue applying the molding around the shelter, one direction from center and then the other, pulling the material as you go so that surface is relatively wrinkle-free and snug. Use a side cutters to trim the ends of the molding if they are not equal relative to base. If the ends of the molding extend beyond the rear edges of the canopy brackets (check by feeling from outside the Tent), use a side cutters to trim the ends back to 1-2" behind the canopy brackets.

Reinstall the rear adjustable spreader pole to tighten the fit of the tent. If everything still looks good, secure the molding with the #6 phillips screws. Evenly space them about every ten to twelve inches, and also put a screw in the center of both corners. Since there aren't any predrilled holes, it's advisable to use a powered driver for this operation.

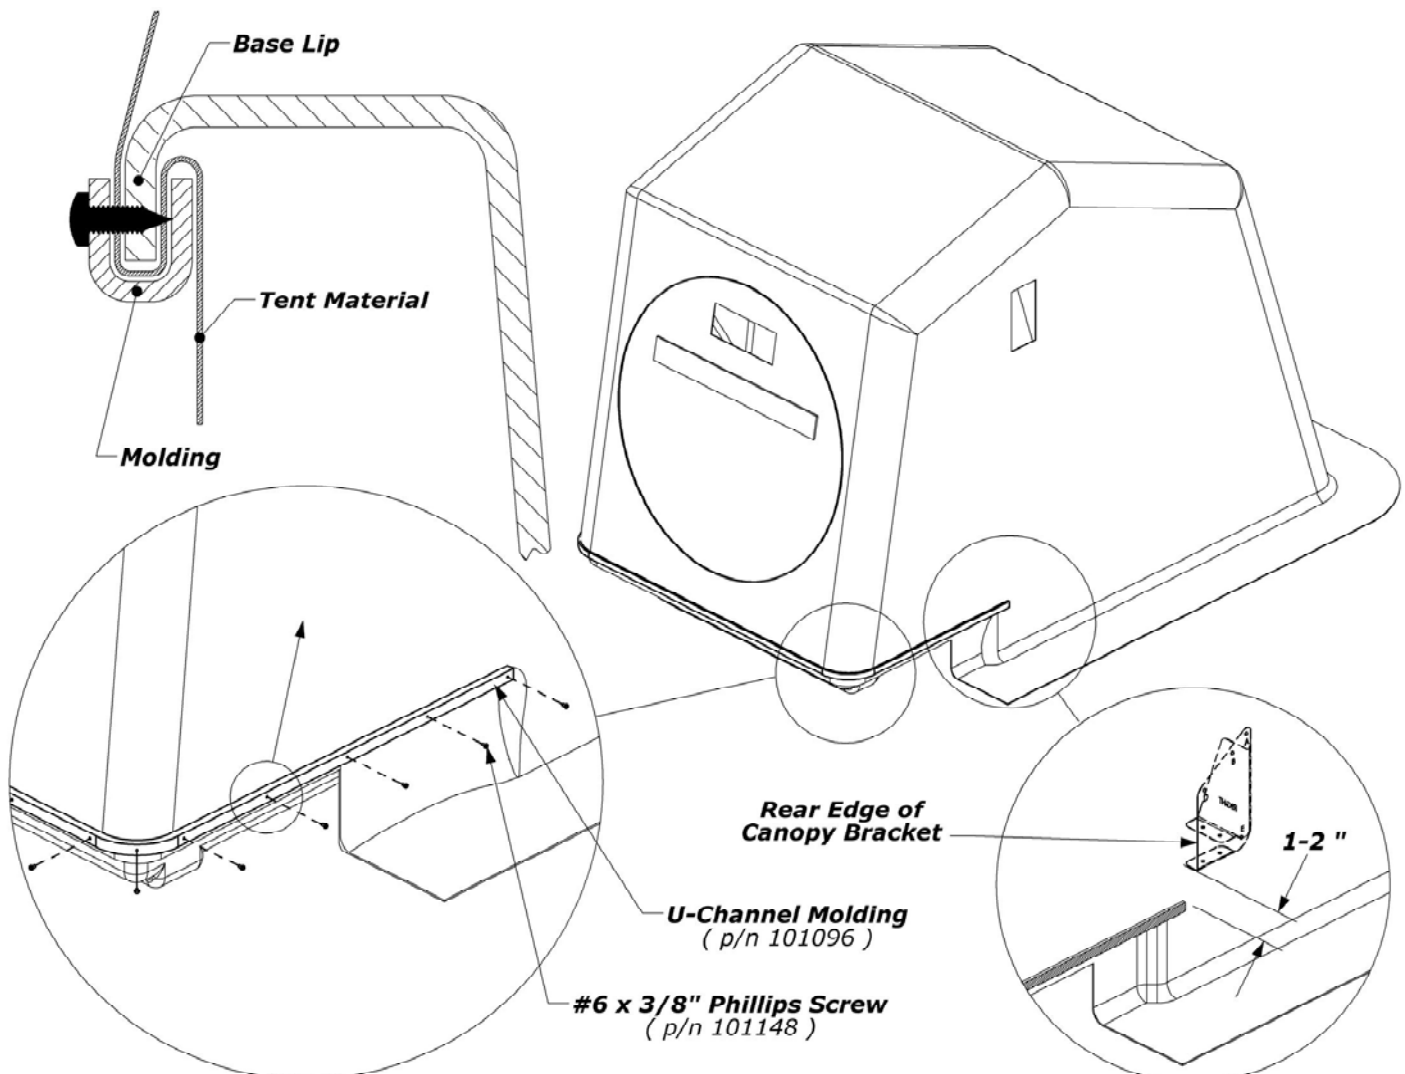

- Step Twelve -


Angle the seat assembly slightly while placing the bottom lip of the front seat bracket under the outside edge of the base lip.

Tilt the complete assembly downward so that the rear seat bracket lands upon the support tube.

Reach under the rear seat bracket and slide the latch clip outwards and then up against the underside of the support tube. Squeeze the latch clip into the horizontal slot of the rear seat bracket.

Secure the position of the latch clip by pushing it into the two holes located above the horizontal slot of the rear seat bracket.

WARNING: ALWAYS KEEP THE LATCH CLIP IN THE SECURED POSITION DURING USE. FAILURE TO DO SO COULD RESULT IN INJURY FROM THE SEAT COMING OFF OF ITS MOUNTING SYSTEM.

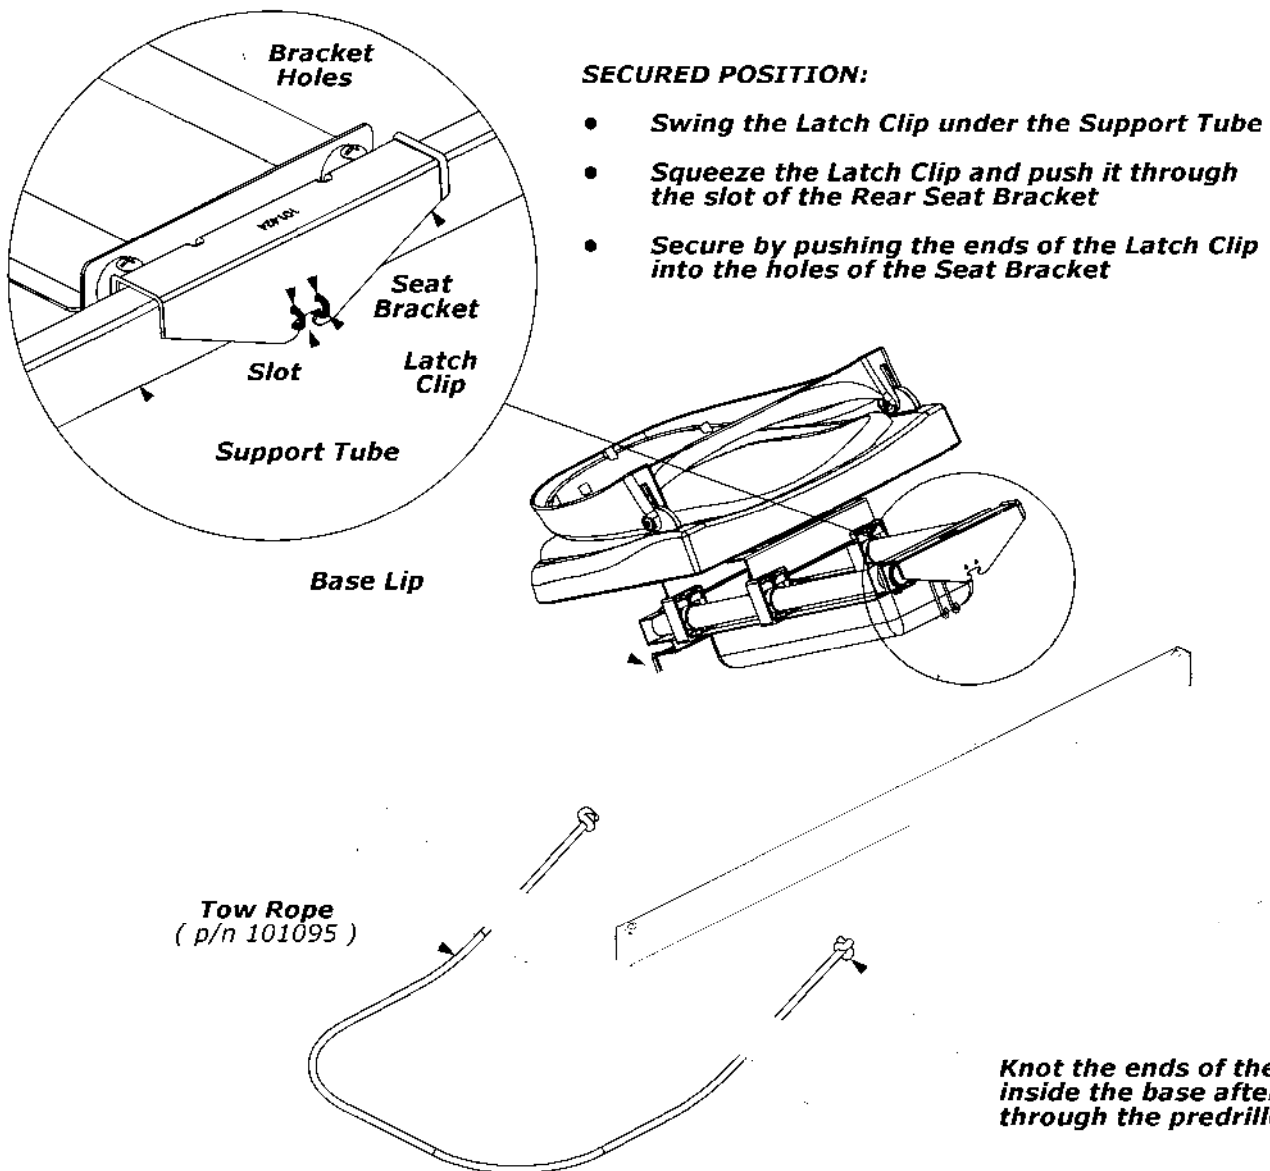

- Tips for Use -

Folding and transporting your Fish Trap is easy:

- *Unsnap the rear spreader pole and lay it in the bottom of the base.*
- *Push the spring buttons and retract each hoop, starting with the rear hoop and working towards the front. Rotate all retracted hoops to the resting position. Tuck the tent into the base and between the hoops so that no material is left hanging on the ground for transport.*
- *Cover with the Travel Cover* (an optional but recommended accessory to help prolong the life of the unit). Tow the unit out to your favorite fishing spot! (NOTE: continuous pulling behind an ATV or snowmobile may result in premature wear of the base. We recommend the optional Wear Strips* be mounted to the base of your Fish Trap).*

Make sure your Ice Shelter is completely dried out before storing for long periods of time. Store your Ice Shelter in a cool, dry place. Keep away from rodents.

**See our accessory catalog or www.clamcorp.com for these items and more!*

- Safety Instructions -

Please fully understand and follow all safety instructions as outlined. Failure to do so could result in severe injury or death.

- *Do not use open flame heaters in your ice shelter. Injury or death may result from fire if tent fabric is exposed to open flame. The tent is not fireproof, but the fabric is treated with a fire retardant that meets CPAI-84 specifications. Application of any foreign substance may render the flame retardant properties ineffective. Ice Armor fabric will melt when contact is made with hot surfaces (i.e., heaters).*
- *Death from asphyxiation may result from use of oxygen depleting heaters. Open all vents for fresh air ventilation.*
- *Never leave shelter unattended when set up.*
- *Due to the increase in traffic (snowmobiles, autos, etc.) on area lakes, ice fishing can be hazardous at night. If you choose to fish at night or in poor visibility conditions, be sure to take precautions with lights or reflectors to show drivers your whereabouts. Night time: exterior reflectors must be visible to reduce risk of collisions.*

- Warranty -

Clam Corporation warrants to the original retail purchaser that all Clams are free from manufacturer's defects for one (1) year from the date of the original purchase. Warranty does not cover cracked windows, tent tears, broken or bent hoops due to high wind weather conditions or unattended use. Clam Corporation will replace or repair any part found defective within the one (1) year time limit. All parts must be returned to Clam Corporation. Before returning any parts, you must first call or write and acquire a return authorization. All returns must be returned postage-prepaid and include the original cash register receipt (date and purchase price).

Note: Please write the return authorization number on the outside of the package to help ensure the transaction gets processed swiftly and accurately.

- Limitation of Liability -

It is expressly understood that Clam Corporation's liability for its products, whether due to breach of warranty, negligence, strict liability, or otherwise, is limited to the repair of the product as stated above. Clam Corporation is not liable for any injury, loss, damage, or expense, whether direct or consequential, including but not limited to loss of use, income, profit, or damage to material arising in connection with the sale, installation, use of, inability to use, or the repair or replacement of Clam Corporation products. Clam Corporation reserves the right to make alterations or modifications in its products at any time, which in its opinion, may improve the performance and efficiency of the product. It shall not be obligated to make such alterations or modifications to products already in service.